

## Color rama (2P) Test Mode

To enter test mode:

Press the TEST switch location inside player 1 front door.

LED will displays:

```

  L S L
  _ _ _
  |
  
```

LED displays 9 items when pressing TEST switch in order and exit at last. To enter the test mode press the TEST button again.

### Test-1

Test each segment of every LED on the display and each line of the dot blocks.

### Test-2

Test LED location in #1 control panel display.

LED display:

LED location in #1 control panel count 1~99 in cycle.

```

  d P L
  - - |
  
```

### Test-3

Test LED location in #2 control panel display.

LED display:

LED location in #2 control panel count 1~99 in cycle.

```

  d P L
  - - 2
  
```

### Test-4

Test input of each SW in this game.

00—None SW close	01—1#Coin
02—1#TicketAssy Feedback	03—1#Ticket Reset
04—1#Red Button	05—1#Grn Button
06—1#Blu Button	07—1#Yel Button
08—1#Wht Button	09—1#Stop
10—No Function	11—2#Coin
12—2#TicketAssy Feedback	13—2#TicketAssy Reset
14—2#Red Button	15—2#Grn Button
16—2#Blu Button	17—2#Yel Button
18—2#Wht Button	19—Alarm
20—No Function	21—Red Bonus SW
22—Grn Bonus SW	23—Blu Bonus SW
24—Yel Bonus SW	25—Wht Bonus SW
26—Test SW	27—Setting SW

## Test-5

Test LED、Lamp and Light belt.

LED display:

Press Clear switch testing each items.

LED displays the relation NO. of each items.

01—1#RedButton Lamp	02—1#Grn Button Lamp
03—1#BluButton Lamp	04—1#Yel Button Lamp
05—1#WhtButton Lamp	06—2#Red Button Lamp
07—2#GrnButton Lamp	08—2#Blu Button Lamp
09—2#YelButton Lamp	10—2#Wht Button Lamp
11—Stop Lamp	12—1#Indicate Lamp(Chip in)
13—2#Indicate Lamp(Chip in)	14—Lamp(Red)
15—Lamp(Grn)	16—Lamp(Blu)
17—Lamp(Yel)	18—Lamp(Wht)
19—Light Belt 1	20—Light Belt 2
21—Light Belt 3	

## Test-6

Test output of this game.

LED displays:

Press Clear switch testing output of this game.

- 01- Coin counter
- 02- Ticket counter
- 03- Turn plate

## Test-7

Test #1 Ticket Assy output.

LED display:

Press the Clear switch and the Ticket Assy output a ticket.

When output tickets, LED display:

When fault, LED display:

When free, LED display:

## Test-8

Test #2 Ticket Assy output.

LED display:

Press Clear switch and the ticket Assy output a ticket.

When output tickets LED display




The image shows two LED displays. The top one shows 'E1' on the left and 'E2' on the right, with a horizontal line between them. The bottom one shows 'E1' on the left and 'E2' on the right, with a horizontal line between them.

When fault LED display



The image shows an LED display showing '00'.

When free LED display

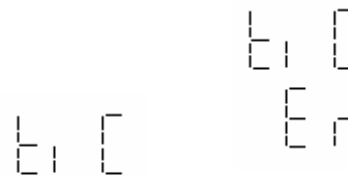

The image shows two LED displays. The top one shows 'E1' on the left and 'E2' on the right, with a horizontal line between them. The bottom one shows 'E1' on the left and 'E2' on the right, with a horizontal line between them.

## Test-9

Test the sound of this game.

LED displays:



The image shows an LED display showing '500'.

Press Clear switch and test the effect of sound in this game.

The last 2LED on the right side display the sound numbers accordingly.

- |                          |                           |
|--------------------------|---------------------------|
| 01- Background Music     | 23- Alarm                 |
| 02- Stop panel           | 24- Let's play color rama |
| 03- All music close      | 25- Select your color     |
| 04- Coin1                | 26- Color rama            |
| 05- Coin2                | 27- Ball press SW: Blu    |
| 06- Coin3                | 28- Ball press SW: Grn    |
| 07- Coin4                | 29- Ball press SW: Red    |
| 08- Coin5                | 30- Ball press SW: Wht    |
| 09- Ball press the JP SW | 31- Ball press SW: Yel    |
| 10- Pop                  | 32- Ticket fault          |
| 11- Ticket1              | 33- Alarm                 |
| 12- Ticket2              |                           |
| 13- Ticket3              |                           |
| 14- Ticket4              |                           |
| 15- Ticket5              |                           |
| 16- Stop Clew            |                           |
| 17- Blong                |                           |
| 18- Color Clew: Wht      |                           |
| 19- Color Clew: Red      |                           |
| 20- Color Clew: Yel      |                           |
| 21- Color Clew: Grn      |                           |
| 22- Color Clew: Blue     |                           |